

Users restricted to
18 years of age or older
使用年齡對象18歲以上

電動手槍

AUTO ELECTRIC GUN


CM.121




《完成品》

在操作之前必需读熟这些说明书
Always read through this manual before operation.

警告 WARNING	
 18岁以上年龄才能使用 Only for 18 years of age or older	18岁以上年龄才能利用这支汽枪比赛使用 Operation of this air gun for competition use is restricted to users of 18 years of age or older.
 注意受损伤 Injury caution	因为BB弹能达到50-60米范围, 不小心的射击将可能导致眼睛受损伤或其它伤害。 Since plastic BB bullets reach 50 to 60 meters, careless shooting may cause eye damage or other injuries.
 注意熟读警告指示手册 Careful reading of Handling cautions and instruction manual	在操作之前要细心读熟警告手册和指示手册操作汽枪时必须认识好警告指示 Always read through this HANDLING CAUTIONS AND INSTRUCTION MANUAL carefully before operation. Operate the air gun with full recognition of warnings and cautions.

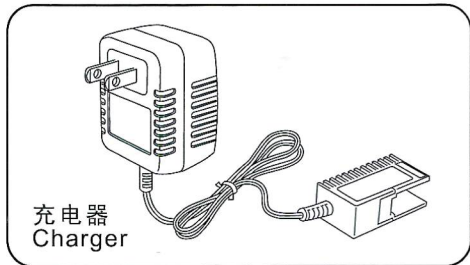

充电器
Charger

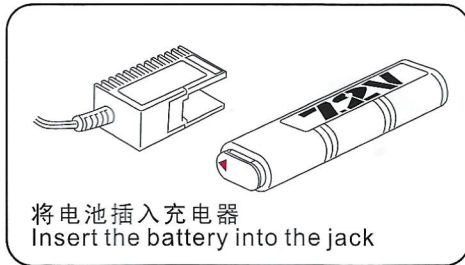


将电池插入充电器
Insert the battery into the jack

1.各部分名称 NAME OF EACH PART





2.保险销 SAFETY

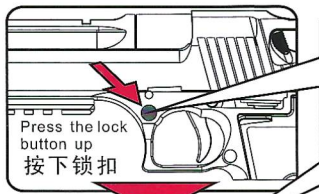

Press the lock button up
按下锁扣

● KEEP THE SAFETY AT "SAFE POSITION" WHEN THE GUN IS UNUSED.
当枪是不用的时候, 请把保险拨到 "SAFE POSITION" 位置

安全位置 SAFE POSITION	...	射击位置 SHOT POSITION
-----------------------	-----	-----------------------

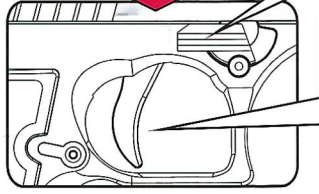 

● USE THE FIRST FINGER TO PULL THE TRIGGER 用食指扳动扳机
NEVER PUT THE FINGER ON THE TRIGGER BEFORE SHOOTING
射击前切勿将手指放在扳机上

